
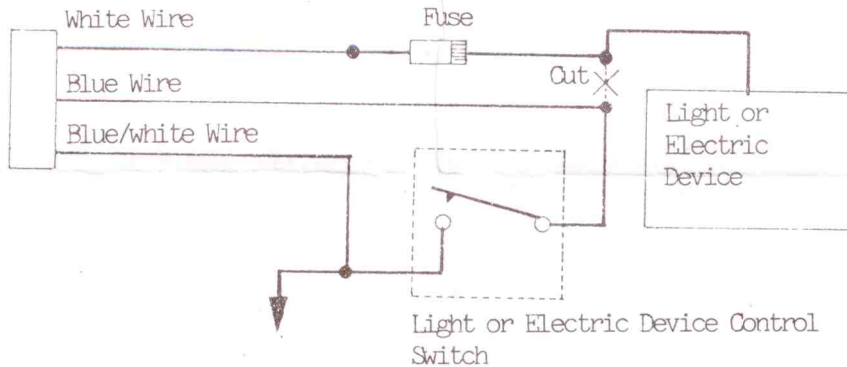


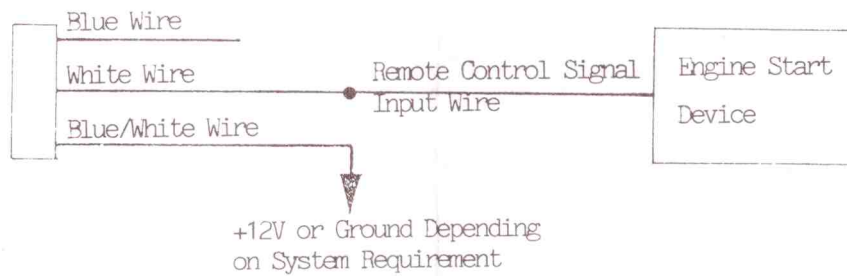

D. PROGRAMABLE WIRE LOOP:

Side of the control module to locate two programmable wire loops, and these two wire loops let the user to select types of output function. Make preliminary setting as follows:

Output function	Gray wire loop	Green wire loop
Momently pulse output	Keep	Keep
Latching output	Cut	Keep
3 minutes timer	Keep	Cut
60 seconds timer	Cut	Cut

E. PROGRAMMING THE TRANSMITTER CODES:

CAUTION: ATEER THE UNIT COMPLETELY INSTALLED, YOU MUST BE PROGRAMMING THE TRANSMITTER CODES FIRST.

This control module can learn two diffent transmitter codes.

1. Using a ball pen push the programming switch then release. (The programming switch on side of the control module)
2. press the lower button of the transmitter and hold it down about 3 seconds, then release the button.
3. If you have second transmitter, within 5 seconds, press the lower button of the second transmitter and hold it down about 3 seconds, then release the button.

NOTE: a). After programmed the first transmitter codes, the system will wait for 5 secs. and let you to program the another transmitter codes, if the system does not receive the another transmitter codes within 5 secs. the system will auto-matically close programming mode.

- b). If you want to re-program the transmitter codes, follow the step 1 - 3 to re-program transmitter codes.

