



## Examples

### mode

Current date and real time input or change

Example: Date 01.02.2000; time 14:00  
after Reset



 
O.K. 3x  
◆ 1x



O.K. 2x



O.K. 1x  
◆ 1x



O.K. 1x  
◆ 4x



O.K. 3x

### Mode PR

Programming day or week programme

Several possibilities:

1. Single day, one channel
2. Several days, one channel.
3. Single day, several channels
4. Several days, several channels.

 
Example: Tuesday (2) and Thursday (4) to Sunday (7);  
Switching time 19:00;

Channel A ON; Channel B IMPULSE 05 sec.

Start from: AUTO mode


1x

O.K. 1x




◆ 1x

 O.K. 2x




◆ 1x

 O.K. 1x



O.K. 4x

 ◆ 1x



O.K. 1x

◆ 9x



O.K. 3x

◆ 1x



O.K. 1x

 
◆ 3x




Example  
2 channel  
clock

O.K. 2x

◆ 5x



O.K. 1x

 

Continue with input of further dates / functions or press  
key 1x to return to mode AUTO.

Red: Flashing symbol in display

### PR mode

Holiday programming  
Start and End programming by  
date

 
Programming for certain channels (permanently ON /  
OFF), while others carry out the week programme.

Example: Start: 20.04  
End: 24.04  
Channel B OFF (permanent)

Start from: AUTO mode

1x

O.K. 1x



◀ 1x



◆ 2x



 
O.K. 3x

◆ 4x



O.K. 1x

◆ 2x



O.K. 1x

◆ 4x



O.K. 2x

◆ 4x



 
O.K. 2x

◆ 2x



Example  
2 channel  
clock

O.K. 1x



Continue with input of further dates / functions or press  
key 1x to return to AUTO mode.

The holiday programme does not occupy a stor-  
age location.

By input a new holiday programme the old holiday  
programme is overwrite.

The holiday programme is clear at the end of the  
holiday programme and the outputrelais goes into the  
state of the switching programme. (Programme review)

### S/W mode

Deactivate automatic summertime changes  
(daylight saving)

The default setting on delivery, S/W time change is  
activated.

Initial form: AUTO mode

4x

O.K. 1x



◆ 1x



O.K. 1x



The S/W -  
time  
change is  
deactivated

The time changeover is executed automatically  
according to the „European Regulation“.

Start: Last Sunday in March  
End: Last Sunday in October

### ? mode

Display or alter switching times

Example: Alter Tuesday and Thursday to Sunday  
19:00;  
Channel A ON; Channel B IMPULSE

into: Wednesday to Sunday 19:30;  
Channel A ON; Channel B ON

Start from: AUTO mode

2x

O.K. 1x



Number of  
free storage  
locations  
available

O.K. 3x



◆ 1x



O.K. 1x

◆ 1x



O.K. 1x

◆ 1x



O.K. 7x

◆ 3x



O.K. 3x



◆ 2x



O.K. 1x



Number of  
storage  
locations  
available

1x



### ? mode

Cancel function

Example: Cancelling holiday programme

Start: 20.04 End: 24.04

Sart from: AUTO mode

2x

O.K. 1x



Number of  
storage  
locations  
available

O.K. 1x



CL 1x



1x



If CL key is pressed twice while free storage  
locations available are displayed, all inputs are cancelled.  
(Clear all)